# Phoroptor® VRx Quick Reference Card

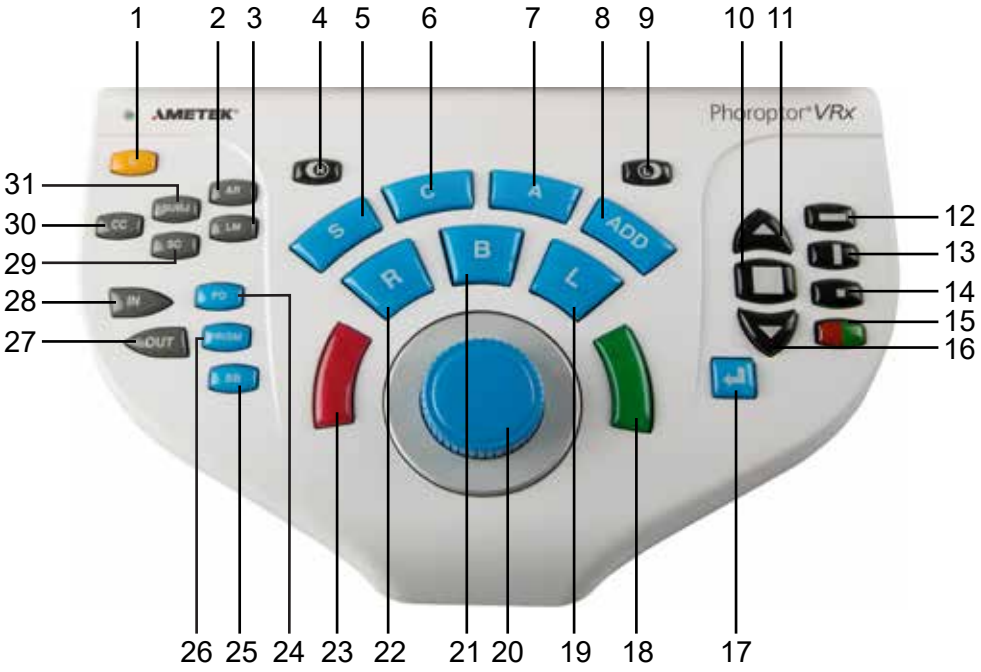


**Figure IS-05, Keypad**

1. C—Clear data
2. AR—Auto Refractor
3. LM—Lens Meter
4. R—Right Eye Open/Close
5. S—Sphere Adjustment
6. C—Cylinder Adjustment
7. A—Axis Adjustment
8. ADD—Near Vision Addition
9. L—Left Eye Open/Close
10. Display Multiple Lines of Optotypes
11. Improve Visual Acuity or Increase Optotype Size
12. Horizontal Line Mask
13. Vertical Line Mask
14. Single Optotype Mask
15. Red/Green Filter
16. Decrease Visual Acuity or Decrease Optotype Size
17. Enter Key for Cross Cylinder Tests
18. Green Button for Split Prism Test
19. L—Left eye aperture
20. Control Knob
21. B—Binocular Vision Measurement
22. R—Right eye aperture
23. Red Button for Split Prism Test
24. BB—Binocular Balance
    (3 Δ base down prism in right eye,
    3 Δ base up prism in left eye)
25. PRISM—Automatically brings in prism lenses
26. PD—Pupillary Distance Measurement
27. OUT—Export Data
28. IN—Import Data
29. SC—Data Without Correction
30. CC—Data With Correction / Final
31. SUBJ—Subjective Refraction Data

**Note:** In this manual, when asked to press a button, the instruction will simply say: Press XXX (with the name of the button in all caps.) Example: Press IN.

## Controller Keypad - Buttons

# Phoroptor® VRx Quick Reference Card

## Display Screen

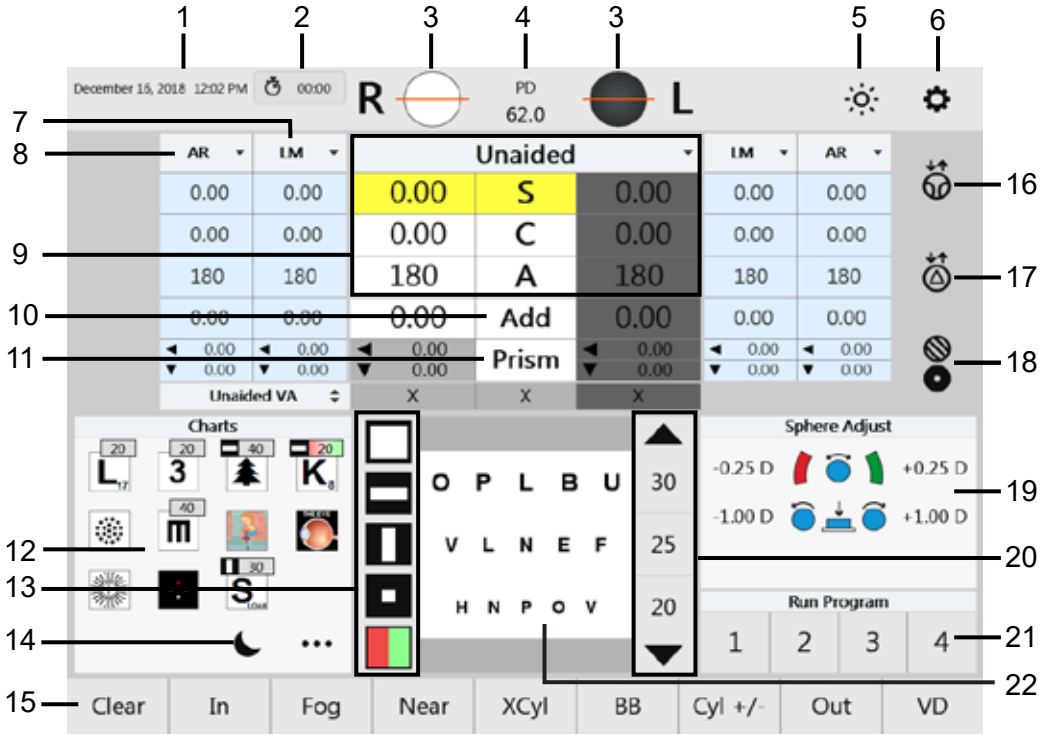


**Figure IS-22, Display Screen**

1. Date and Time
2. Exam Time
3. Active Lenses/Filters
4. Pupillary Distance
5. Display Illumination adjustment
6. Options Menu
7. Lensmeter Data
8. Auto Refractor Data
9. Subjective Data
10. Near Vision Addition
11. Prism Alignment
12. Acuity Test Charts
13. Acuity Chart Masks
14. On/Off for Darkening Acuity Chart Display
15. Selection Bar
16. Near Vision Add- REWRITE
17. Prism Add - REWRITE
18. Auxiliary Lenses
19. Instructions Panel
20. Optotype Size
21. Program Available or Currently Running
22. Projected Chart View/Patient Chart View
23. Visual Acuity Measurement Boxes

### Active Data Field

The larger box with data is the current/active prescription that is being adjusted. The individual measurement boxes are one of three colors:

White - Active field that can be adjusted.
Yellow - Active field that is currently being adjusted.
Grey - Inactive field that cannot be adjusted.

# Controller Keypad - Display


Reichert® TECHNOLOGIES

**Reichert, Inc.**
3362 Walden Avenue, Suite 100, Depew, NY 14043
Toll Free: 888-849-8955 · Tel: (716) 686-4500
Fax: (716) 686-4545 · **www.reichert.com**



AMETEK® ULTRA PRECISION TECHNOLOGIES

**ISO 13485 Certified 16212-105 Rev. B**